

IMPORTANT NOTE:

THIS INFORMATION IS ONLY MEANT TO SHOW HELPFUL EXAMPLES OF HOW HARDWARE MAY BE USED. IT IS NOT MEANT TO BE THE INSTALLATION INSTRUCTIONS FOR A PROJECT.

PLATFORM HARDWARE MUST BE INSTALLED ACCORDING TO ENGINEER DESIGNED AND APPROVED DRAWINGS AND SPECIFICATIONS FOR YOUR PARTICULAR PROJECT.

DO NOT INSTALL PLATFORM HARDWARE ACCORDING TO THESE INSTRUCTIONS WITHOUT ENGINEER APPROVED DRAWINGS DESIGNED FOR YOUR SPECIFIC PROJECT.

ALWAYS INSTALL ACCORDING TO YOUR ENGINEER'S SPECIFICATIONS AND INSTRUCTIONS.




NEVER EXCEED ENGINEER'S SPECIFICATIONS FOR YOUR PLATFORM REGARDLESS OF HARDWARE CAPACITY.

Cable Positioner/Spreader

The Cable Positioner/Spreader attaches to the main support cables and keeps them at the proper spacing

The Cable Positioner / Spreader keeps the main cables at the required spacing to allow the deck panels to be installed properly. The cable positioner/spreader does not interfere with the deck panels because it sits below the main cables.


PLEASE NOTE: The Cable Positioner/Spreader is NOT meant to redirect the main cables. It is ONLY meant to lock the cables into their proper spacing. IF the cables must be greatly redirected the Main Tube Assembly may be required. Please check with your Engineer for the proper hardware for your project requirements.

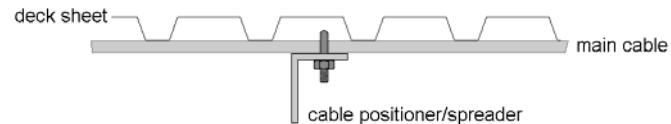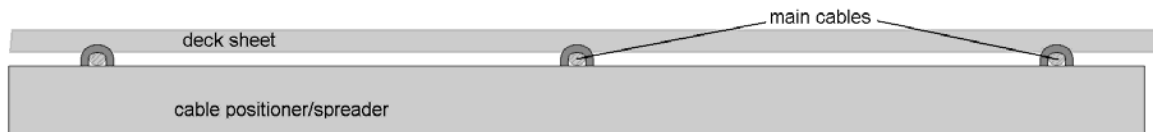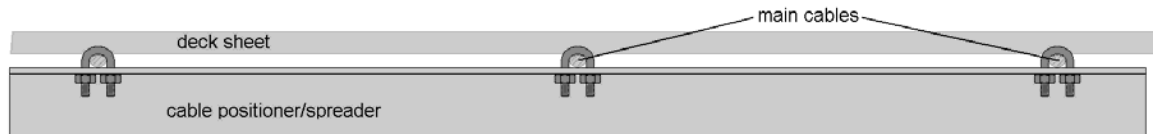

The cable positioner/spreader sits below the main cable and the decking so as not to interfere with the deck panels. Deck panels may be installed right over the cable positioner/spreader.

(NOT TO SCALE)

CABLE POSITIONER / SPREADER

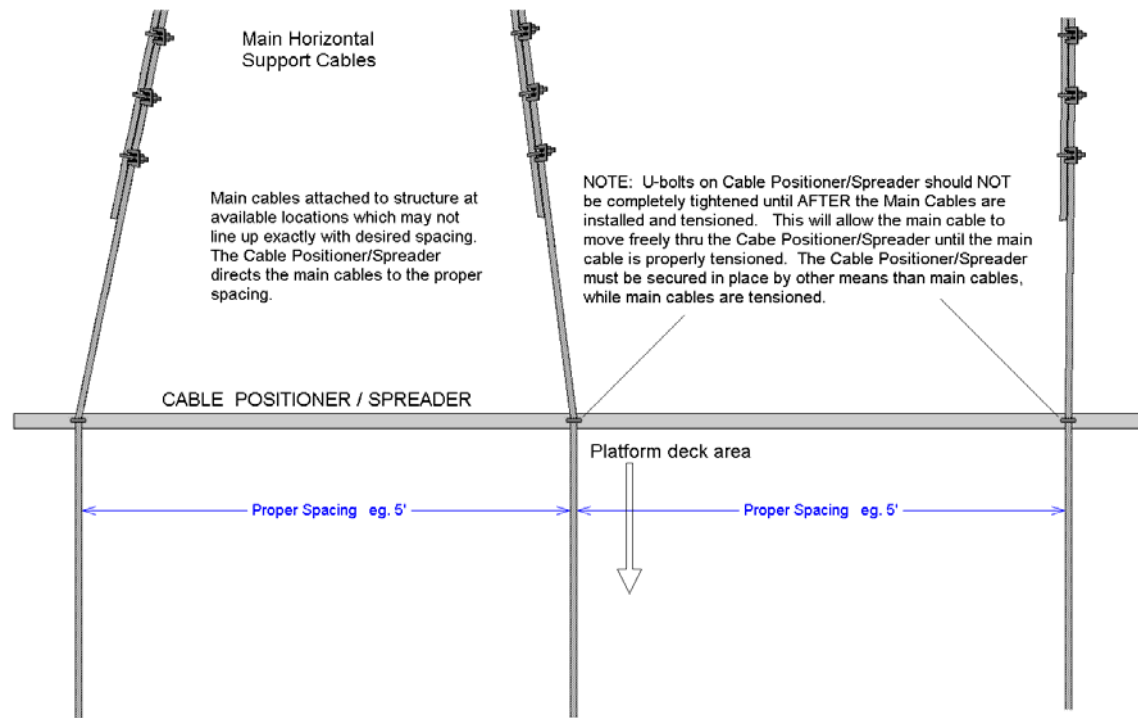

CABLE POSITIONER / SPREADER

(NOT TO SCALE)

